
9. EXPLODED VIEWS AND PARTS LIST

- NOTES: Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
 - The !\textsup mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to ∇ mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.

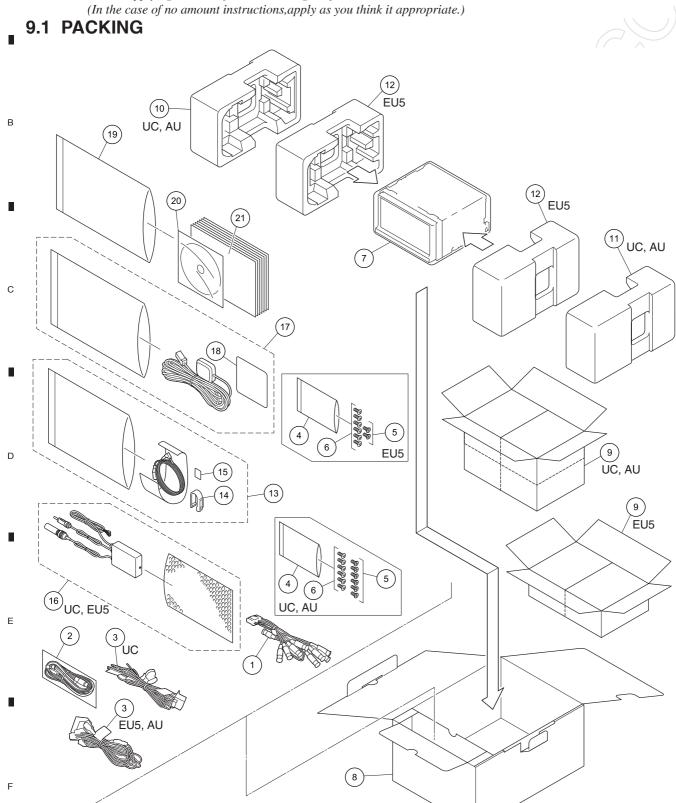

AVIC-Z140BH/XNUC

148

9.2 EXTERIOR (1) 3 G 32 Ġ 31 15 ŧ (22) 18 26 EU5 19 С F F G **(A)** (13) E B H D 30 EU5 EU5 EU5 HYEY AVIC-Z140BH/XNUC 152

9.3 EXTERIOR (2) 9 4 A EU5 (12) 15 27) EU5, AU 25 D (28) 19 A F E

AVIC-Z140BH/XNUC

9.4 EXTERIOR (3) (20) В EU5, AU (22) UC 22 D (15) Spreads grease on tip of gear. (16) Spreads grease on the entire gear. (B) 9 (A): GEM1024 (B): GEM1043 1 (B) 12 (B) (A) (B) AVIC-Z140BH/XNUC 156

9.5 DVD MECHANISM MODULE (1)

